



How to configure the access point as a repeater:

How to configure the access point as a repeater:

- Connect the repeater directly to the Router via a network cable.
- Connect device to power adapter and insert into mains
- Make a reset of the access point (DAP-1360) by pressing button (reset) to the right (next to one of the antennas) until the LED begins flashing.
- Wait for about one minute for the computer to start again then begin with the configuration.
- From a computer connected to the router via cable or Wi-Fi open your browser (Internet Explorer, Mozilla Firefox, Opera or Chrome) and enter the access point settings in your browser by typing the address <http://dlinkap>

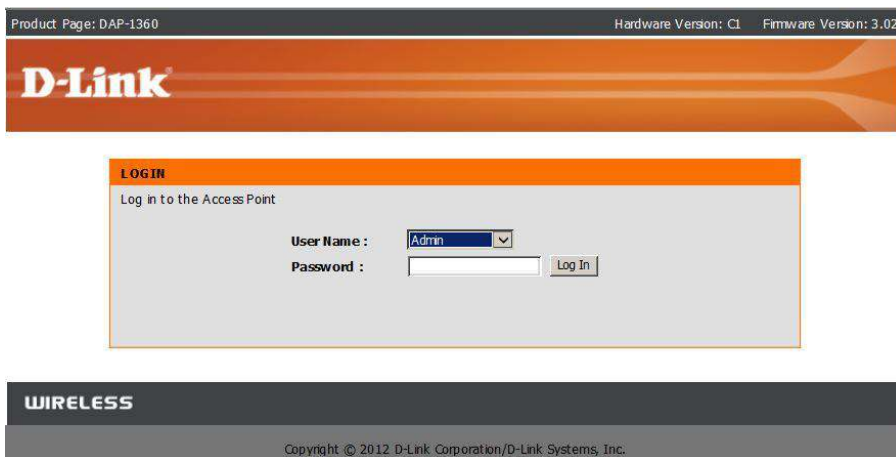

- If an installation wizard (WI-FI Connection Setup Wizard) please click “Cancel”, then continue with manual setting.
- If the website asks the user put username and password "admin" and password blank.
- Once inside the configuration, click on "Setup" and then on the left hand-side, click on “WIRELESS SETUP”
- In “Wireless Mode” select **MODE WIRELESS REPEATER**

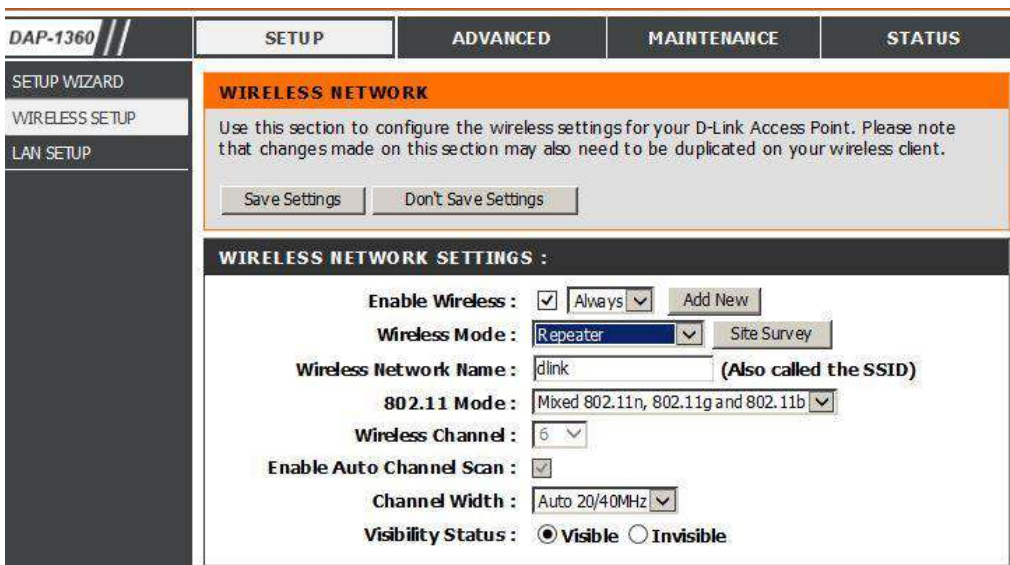


How to configure the access point as a repeater:

- Once selected, click on "SITE SURVEY"

Select the name of your wireless network, network router or network that you want to repeat. Once selected, click on the radio button to select your wireless network and then click on "Connect" at the bottom of the window.

- Select the WIRELESS SECURITY MODE that matches your wireless network.

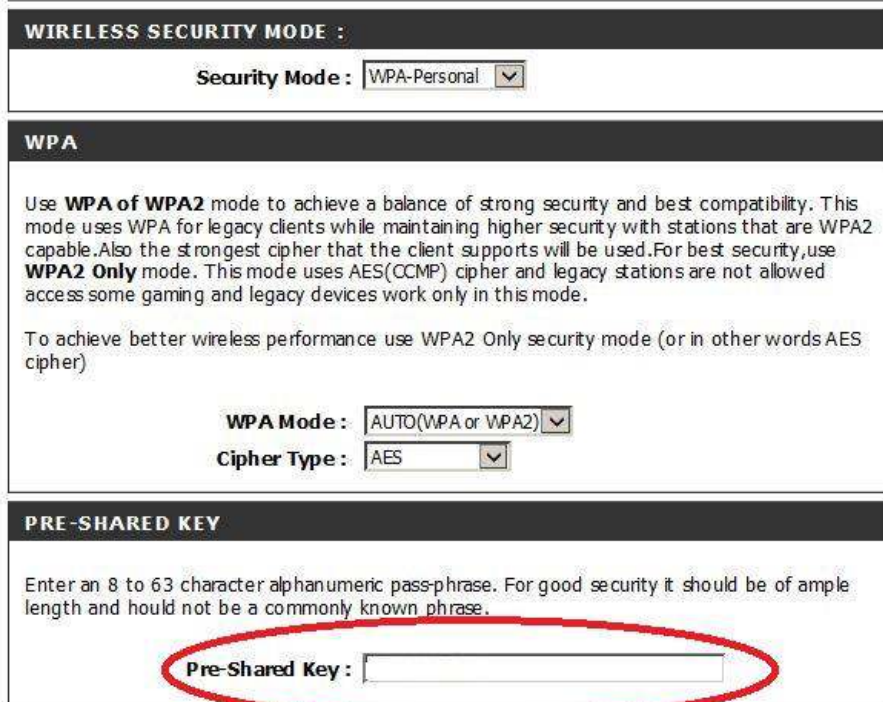

WIRELESS SECURITY MODE :

Security Mode : WPA-Personal

WPA

Use **WPA of WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access some gaming and legacy devices work only in this mode.

To achieve better wireless performance use WPA2 Only security mode (or in other words AES cipher)

WPA Mode : AUTO(WPA or WPA2)


Cipher Type : AES

PRE-SHARED KEY

Enter an 8 to 63 character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Pre-Shared Key :

- In PRE-SHARED KEY, enter the password correctly to connect to enable repeat.

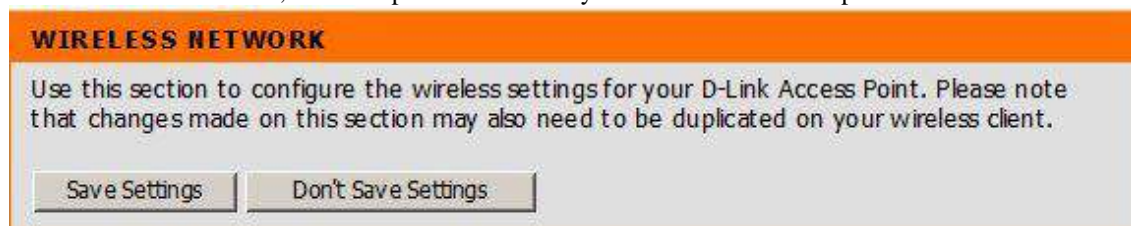

WIRELESS NETWORK

Use this section to configure the wireless settings for your D-Link Access Point. Please note that changes made on this section may also need to be duplicated on your wireless client.

Save Settings Don't Save Settings

- Click on SAVE SETTINGS to save the changes.

At this time the access point is configured, you can disconnect the network cable and you can place it in an intermediate point between the router and an area where there is no Wi-Fi coverage. At this point you only need to plug the access-point into a wall socket.

Best regards,
D-Link Technical Support